

BRAUN

PowerBlend 9



Type JB 901AI

Register your product
www.braunhousehold.com

English 10

عربى 15

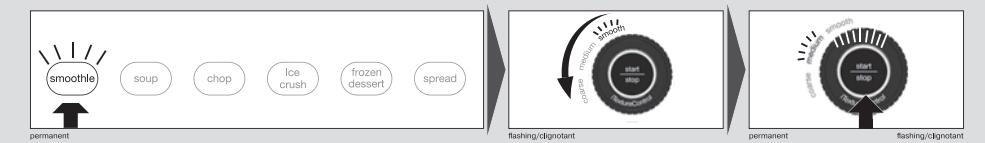
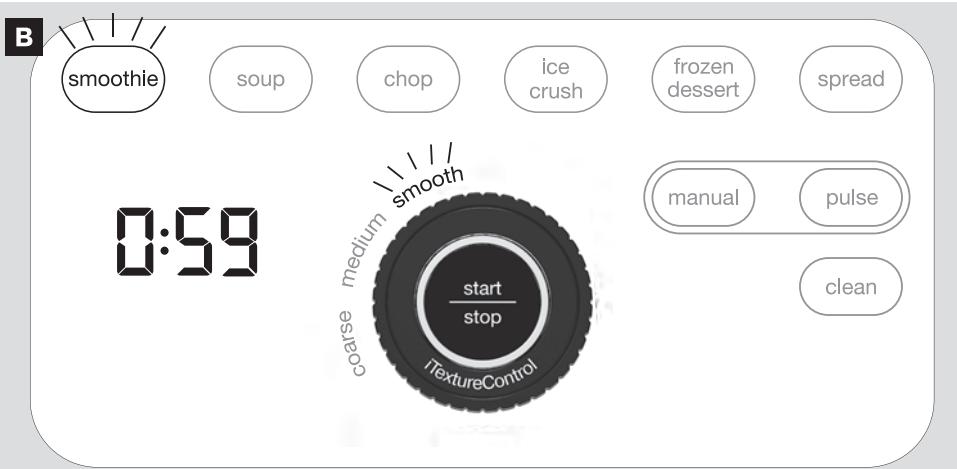
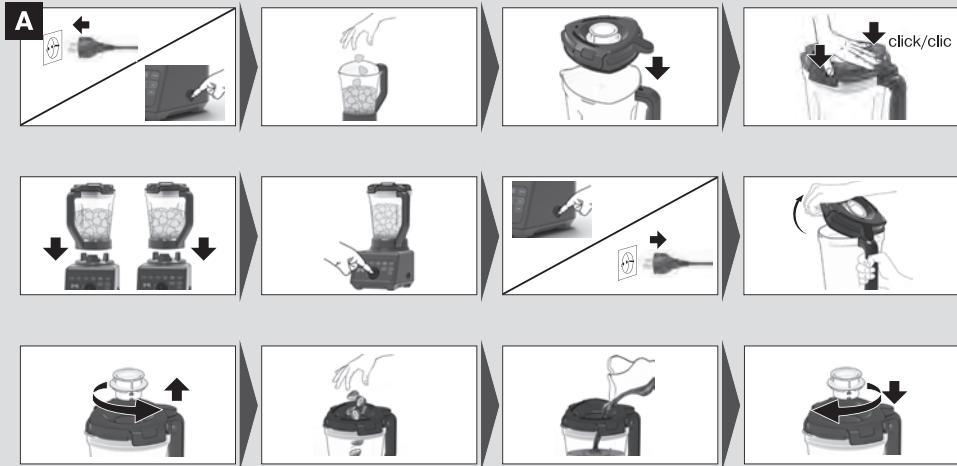
© Copyright 2023. All rights reserved
De'Longhi Braun Household GmbH
Carl-Ulrich-Straße 4
63263 Neu-Isenburg/Germany

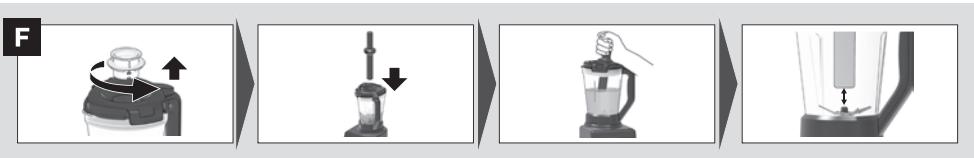
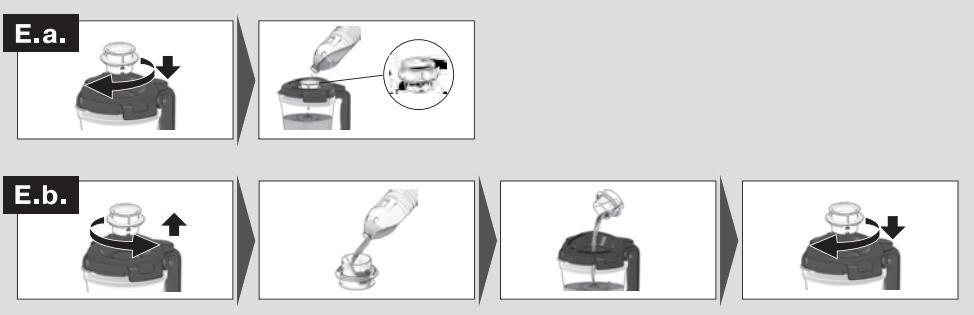
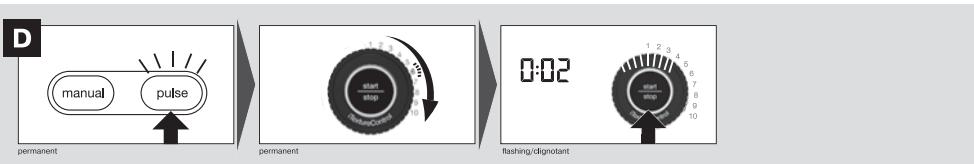
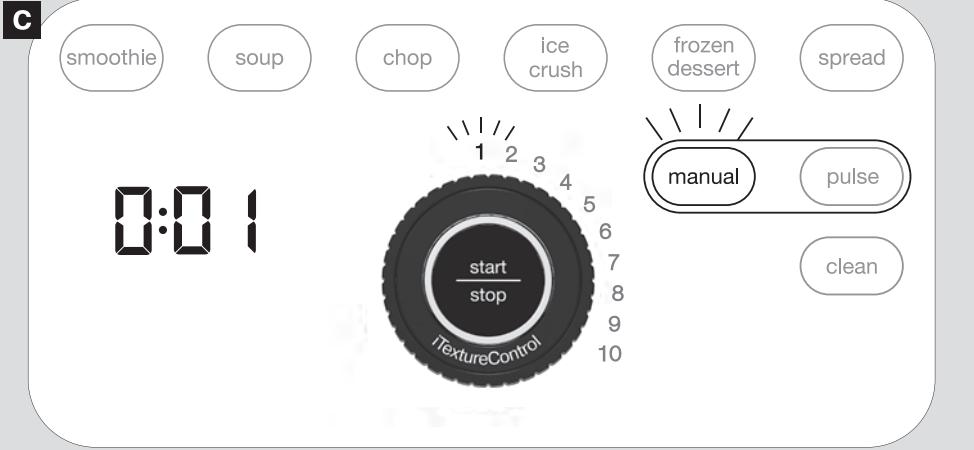


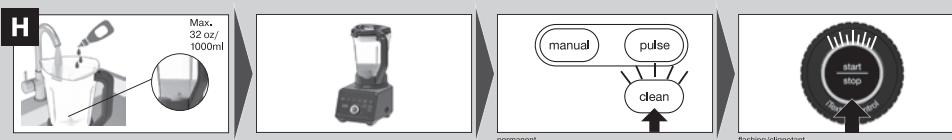
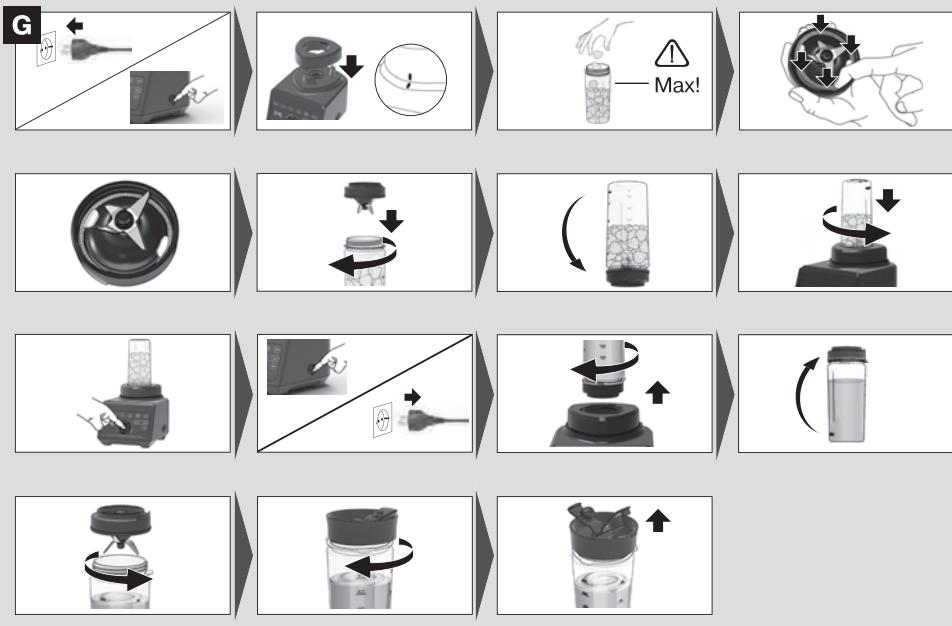


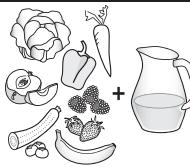



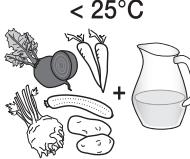

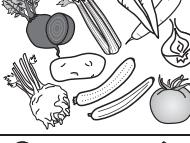



*certain models only



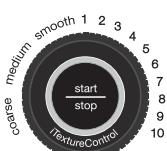
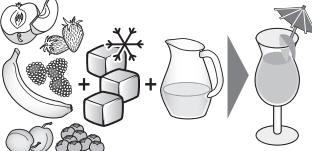

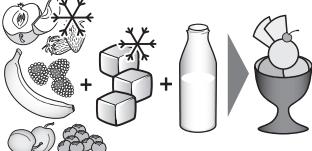









I			Program			
 +  	2000 ml		smooth medium coarse	AUTO		
 +  	2000 ml		2x smooth	AUTO		
 +   	1800 ml		smooth (hot soup function)*	AUTO		
 +   	1800 ml		medium coarse	AUTO		
 +  	1000 g		smooth medium coarse	AUTO		
 +  	600 g		smooth medium coarse	AUTO		
 3 cm 	250 g		2x smooth 2x medium 2x coarse	AUTO		

EN *see dedicated chapter / AR *انظر الفصل المخصص لذلك

		Program			sec.	
 	200 g - 400 g		2x smooth 2x medium 2x coarse	AUTO		
 3 cm 	600 g		2x smooth 2x medium 2x coarse	AUTO		
 	12x 		smooth medium coarse	AUTO		
 +  +  	2000 ml		smooth medium coarse	AUTO		
 +  +  	400 g - 800 g		smooth medium coarse	AUTO		
 	600 g		smooth medium coarse	AUTO		
   	500 ml		1.) 1 - 3 + 2.) 7	60 + 60		
   	1800 ml		1 - 10	45 - 60		



		Program			
	500 g - 1000 g		6	10 - 15x pulse	
	15 g - 30 g		10	5 - 10x pulse	
	100 g - 300 g		6	5 - 10x pulse	

				Program		
	600 ml max 200 g			smooth medium coarse		AUTO
	4x			smooth medium coarse		AUTO
	600 ml			smooth medium coarse		AUTO

Safety Instructions

Before use

 Please read the user instructions carefully and completely before using the appliance and retain for future reference. Remove all packaging and labels and dispose them appropriately.

Caution

-  The blades are very sharp! To avoid injuries, please handle blades with utmost care.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- This appliance shall not be used by children.
- Children shall be kept away from the appliance and its main cord.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always switch off and unplug the appliance when it is left unattended and before assembling, disassembling, cleaning and storing.

- Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
- Never immerse the unit in water or other liquids.
- Caution: Ensure the complete lid is placed on the jug before starting into operation.
- Before plugging into a socket, check whether your voltage corresponds with the voltage printed on the bottom of the appliance.
- This appliance is designed for household use only and for processing normal household quantities.
- Do not use the appliance for any purpose other than the intended use described in the user manual. Any misuse may cause potential injury.
- Do not use any part in the microwave.
- Please clean all parts before first use or as required, following the instructions in the Care and Cleaning section.
- Always operate the blender with the lid or the guard in position as indicated in the instructions.
- Never put your hand in jar when it is placed on the base unit. If food needs to be pushed down use suitable tool e.g. spatula.
- Important: Keep all packaging (plastic bags, polystyrene foam) away from children.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance

must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

- Do not use the device without any load in the jug.
- Do not store food or liquids in the jug.
- Avoid bumping or dropping the blender when in operation or at any time.
- To avoid damage, do not fill the containers past the "max" marking or scale.

Description

1. Measuring cap
2. Jug
3. PrecisionEdge blade
4. Centering pad
5. iTextureControl dial + START/STOP button
6. On/Off switch
7. Timer
8. Illuminated touch display
9. Motor base
10. Cord storage (on back side)
11. Lid incl. gasket
12. Tamper

Smoothie2Go blending set consisting of:

13. 2 x 600 ml Smoothie2Go bottles incl. drinking lids
14. Smoothie2Go blade group incl. gasket
15. Smoothie2Go adapter

Before First Use

Clean all parts before using the blender for the first time – refer to „Care and Cleaning“.

(A) Using the Jug

When switched on (6) and any container (2/13) is assembled, MANUAL lights up and the START/STOP button (5) is flashing, indicating the appliance is ready to use.

By removing the measuring cap (1), you can add additional ingredients or liquids at low speed (Fig. A).

Caution:

- Never attempt to operate the appliance without the centering pad (4)
- Be careful when blending hot liquids in the jug using the manual mode. Start blending on speed 1 to avoid possible burns due to escaping steam and splashes. The maximum allowed amount of hot liquid ingredients in the jug is 1500 ml.
- The coupling seat may be hot after running – do not touch.

(B) Automatic Food Programs & Texture Modes

First, select one of the 6 automatic food programs (8) and then select your desired texture (5) to deliver your preferred consistency. Once you press START (5), the timer (7) shows the total blending time and counts down (Fig. B). The program stops automatically when the countdown ends. To stop the program in advance, press any button.

For detailed processing instructions refer to table I.

Pause

To pause the program press START/STOP (5). The timer (7) and the dial (5) start flashing indicating the pause mode. To continue the program press START/STOP again.

„Hot Soup“ Function

When using the program „soup“ + texture „smooth“ the blades in the jug reach speeds fast enough to bring cold ingredients to steaming hot in about 6 minutes.

Caution: Do not insert hot ingredients (warmer than 25 °C) when using this function. When preparing soups with hot pre-cooked ingredients use **medium/coarse** texture.

For detailed processing instructions refer to table II.

(C) Manual Mode

To start or stop blending, press the START/STOP (5) button. The timer (7) counts up (Fig. C).

For detailed processing instructions refer to table I.

Auto Off

The appliance assembled with the jug (2) stops blending automatically after 6 minutes processing time in manual mode and assembled with the Smoothie2Go bottle (13) after 2 minutes. To re-start operation, press START/STOP (5).

Stand-By

If no speed or mode is selected the appliance enters into stand-by mode automatically after 2 minutes and all indicator lights are switched off, only the timer (7) is dimmed and shows „---“. To re-activate the blender press any button or move the dial (5).

(D) Pulse Mode

The pulse mode can be used to break apart larger pieces of food or to control the texture of food when chopping. Pulse at desired speed.

Duration depends on how long you press the START/STOP button (Fig. D).

(E) Using the Double Function Measuring Cap

During operation use the measuring cap (1) to slowly add oil through the dripping hole to emulsify sauces and dressings (Fig. E.a) or easily add small amounts of liquids (Fig. E.b).

Thermal Motor Protection

The blender is equipped with a thermal protector which protects the motor from overheating. If the motor shuts down during operation, unplug the blender and let it cool down for a minimum of 30 minutes before continuing blending.

(F) Using the Tamper

It helps to push unmixed ingredients down from the jug wall and to bring thick mixtures into the blades while blending. The supplied tamper (12) will not touch the blade when used through the opening of the measuring cap (1) (Fig. F).

Note: It must be used only when the main part of the lid is in place.

For Best Results

- If blending action stops during blending there may be not enough liquid to blend efficiently. Add some more liquid or insert the tamper and stir slowly.
- For preparing small amounts of food use a low speed level.
- When chopping nuts, cheese and meat we recommend running the selected program/texture twice to achieve desired results.
- When chopping vegetables, we recommend adding a small amount of water to improve the circulation. After finishing, strain your chopped ingredients.
- Fill the jug in the following order: Liquids, dry goods, leafy greens, soft ingredients, hard or frozen ingredients, ice cubes. Fill the ingredients in the reverse order into the Smoothie2Go bottle.
- If blending in manual mode, always start on speed 1 and slowly increase to the desired speed.

(G) Blending with the Smoothie2Go Bottle

Note: When using the Smoothie2Go bottle the programs **smoothie** and **ice crush** are available for use. The Smoothie2Go bottle must not be used to blend hot foods or carbonated liquids. To avoid damage, do not fill the container past the “max” marking.

When preparing protein shakes or drinks with alcohol, do not fill beyond max. 400 ml.

- When chopping solid ingredients (such as parmesan, chocolate or meat) cut them up into small pieces (3 cm).

(H) Care and Cleaning

We recommend cleaning the jug by using the CLEAN program to prolong its lifetime. The program will automatically stop once it completes the cycle.

Fill the jug (2) halfway with water, add a few drops of dishwashing soap and follow the steps as described (Fig. H).

The same procedure applies for the Smoothie2Go bottle (13).

For best results, run the CLEAN program immediately after use. Make sure to thoroughly rinse and air-dry the jug after completion of the program.

Deep Cleaning

We recommend to perform a deep cleaning of the jug on a monthly basis using a vinegar solution to remove food residues and stains.

Prepare the vinegar solution in the jug : dilute 500 ml of vinegar (5% acid) in 500 ml of water (1:1 ratio) and start the CLEAN program. Allow the mixture to stand in the jug for maximum 5 minutes. Rinse the jug well after each deep cleaning and allow it to air dry.

Warranty and Service

For detailed information see separate warranty and service leaflet or visit www.braunhousehold.com.

Please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection points provided in your country.



Materials and accessories coming into contact with food conform to EEC regulation 1935/2004.



Troubleshooting Guide

Problem	Potential causes	Solution
Blender does not operate	No power supply	Check the fuse/circuit breaker in your home. If none of the above works, contact Braun Customer Service
	Jug or Smoothie2Go attachment is not attached properly. Timer shows three dashes (- - -)	Check the correct position of the attachment
Liquid is splashing out of the jug	Gasket is not mounted properly, loose, or even torn	Ensure that gasket is mounted properly
	Jug lid or measuring cap are not closed properly	Close the lid and measuring cap
	Jug is overfilled	Follow the maximum quantity recommendation in the processing table
Motor base is moving on the countertop	Rubber feet are not clean	Clean the rubber feet to ensure a good grip
"OL" appears on the timer display	Overload protection Smoothie2Go	Reduce the filling amount (refer to chapter G).

Error code is shown on the Timer Display (E01,E02,E03,E04,E05)	E01 Overload protection	Turn the blender off, remove the container from the motor unit and check if the blade is blocked. Follow the recommended speed, max. filling capacity or mode in the processing table.
	E02/E03 The thermal protection is activated to protect the drive unit from overheating	Turn the blender off, unplug and wait at least 30 minutes before resuming operation. If the error code does not disappear contact Braun Customer Service
	E04/E05	Turn the blender off and on again. If the error code does not disappear contact Braun Customer Service

For UK Only

Guarantee Information

All Braun Household products carry a minimum guarantee period of two years. The rights and benefits under this guarantee are additional to your statutory rights which are not affected. **Please keep your receipt as this will form the basis of your guarantee.**

In the unlikely event of a breakdown you have access to professional help from our team simply by calling:
0345 222 0458

For service in the Republic of Ireland please call: 012475471

Braun Household undertakes within the specified period to repair or replace any part of the appliance, free of charge (with the exception of any glass or porcelain-ware incorporated in the product) found to be defective provided that;

- We are promptly informed of the defect.
- The product is used and maintained in accordance with the User Instructions.
- The appliance has not been altered in any way or subjected to misuse or repair by a person other than an authorised service agent for Braun Household.

- No rights are given under this guarantee to a person acquiring the appliance second hand or for commercial or communal use.
- Any repaired or replaced appliance will be guaranteed on these terms for the unexpired portion of the guarantee.
- The need for repair has not been caused by insufficient aftercare or cleaning; or damage caused by the chemical or electrochemical effects of water.

Under no circumstances shall the application of this guarantee give rise to the complete replacement of the appliance or entitle the consumer to damages.

Braun Household, New Lane, Havant, Hampshire PO9 2NH
www.braunhousehold.co.uk

Thank You for choosing Braun. We are confident that you will get excellent service from this product.

TO IMPROVE YOUR EXPERIENCE

Register now at
www.braunhousehold.co.uk

By registering we may send you from time to time details on exclusive offers, promotions, recipes and inside tips.

تعليمات الأمان

قبل الاستخدام

يرجى قراءة تعليمات الاستخدام بعناية وبشكل تام قبل استخدام الجهاز والاحتفاظ بها للرجوع إليها في المستقبل. أزل جميع مواد التغليف والملاصقات وتخلص منها بشكل مناسب.



تنبيه

- الشفرات حادة للغاية! لتجنب الإصابات، يُرجى التعامل مع الشفرات بحرص شديد.
- يجب تخفيض الحرارة عند التعامل مع شفرات القطع الحادة، وتغطية الوعاء أثناء التنظيف.



يمكن استخدام هذا الجهاز بواسطة الأشخاص ذوي الإعاقات الجسدية أو القدرات النفسية أو العقلية المحدودة أو من لديهم خبرة قليلة ومعرفة محدودة، وذلك إذا تم إرشادهم أو تدريّبهم على استخدام الجهاز بطريقة آمنة، وإذا كانوا على دراية بالمخاطر التي يتخطى عليها استخدام الجهاز.

- يجب ألا يبعث الأطفال بالجهاز.

• يجب ألا يستخدم الأطفال هذا الجهاز.

• يجب إبقاء الأطفال بعيداً عن الجهاز وعن سلك التيار الكهربائي الرئيسي الخاص به.

• إذا كان سلك التيار الكهربائي تالفاً، فيجب استبداله بواسطة جهة الصنع، أو وكيل الخدمة التابع لها، أو بواسطة شخص يتمتع بخبرات فنية مماثلة، وذلك بغض تقاضي أي مخاطر.

• يجب إيقاف تشغيل وفصل لجهاز عند تركه دون رقابة وقبل التركيب وحال التجميل والفك والتنظيف والتغذية.

• يجب تخفيض الحرارة عند صب سائل ساخن في جهاز تحضير الطعام أو الخلط، حيث أنه قد يندفع لخارج الجهاز نتيجة انبعاث البخار بشكل مفاجئ.

• يُحظر نهائياً غمر الوحدة في الماء أو السوائل الأخرى.

• تنبيه: تأكيد من وضع الغطاء بالكامل على الإبريق قبل البدء في العملية.

• قبل توصيل الجهاز بأجهزة أخرى، يجب التتحقق من أن الجهد الكهربائي للتيار لديك يتوافق مع قيمة الجهد الكهربائي المطبوع على الجزء السفلي من الجهاز.

• تم تصميم هذا الجهاز للاستخدام المنزلي فقط ولأغراض تحضير الكميات المنزلية الطبيعية.

- لا تستخدم الجهاز لأي غرض آخر غير الغرض الموضح في دليل المستخدم، أي سوء استخدام قد يسبب إصابة محتملة.
- لا تستخدم أي جزء من هذا الجهاز داخل الميكرويف.
- يرجى تنظيف كل الأجزاء قبل أول استخدام أو على النحو المطلوب، مع اتباع الإرشادات الموجودة في قسم الرعاية والتنظيف.
- يجب تشغيل الخلط دائمًا في وجود الغطاء أو الحاجز في الوضع المبين في التعليمات.
- يجب ألا تضع يدك أبداً في الوعاء أثناء وضعه على الوحدة الأساسية. إذا كان يجب ضغط الطعام إلى الأسفل، فاستخدم أداة مناسبة، على سبيل المثال الملعقة.
- هام: حافظ على جميع العبوات (أكياس البلاستيك، ورغوة البوليسترين) بعيداً عن متناول الأطفال.
- لتجنب أي خطر بسبب إعادة الضبط غير المقصد للقاطع الحراري، يجب عدم تزويد هذا الجهاز بجهاز فصل ووصل خارجي، مثل المؤقت، أو توصيله بدائرة يتم تشغيلها وإيقافها بانتظام بواسطة أداة مساعدة.
- لا تستخدم الجهاز والإبريق فارغ (من المكونات الصلبة أو السائلة مثلًا).
- لا تقم بتخزين الطعام أو السوائل في الإبريق.
- تجنب هز أو إسقاط الخلط عندما يكون قيد التشغيل أو في أي وقت.
- لتجنب التلف، لا تملأ الحاويات ما بعد علامة أو مقياس .”max“.

الوصف	(B) برامج الغذاء التلقائية وأوضاع القواطع
غطاء المعايرة	أولاًً حدد واحداً من 6 برامج طعام تلقائية (8) ثم حدد القوام الذي تريده (5) لتقديم التناول المفضل لديك، بمجرد الضغط على (5) (START/STOP)، يعرض المؤقت (7) إجمالي وقت الخلط ويتم العد التنازلي (B). يتوقف البرنامج تلقائياً عند انتهاء العد التنازلي. لإيقاف البرنامج قبل بدءه، اضغط على أي زر. للحصول على إرشادات معالجة مفصلة، راجع الجدول الأول „I“.
الإبريق	
PrecisionEdge شفرة	
لوحة توسبيط	
قرص START/STOP + زر iTextureControl	
مفتاح التشغيل/إيقاف التشغيل	
المؤقت	
شاشة مضيئة تعمل باللمس	
قاعدة المحرك	
مخزن السلك (في الجانب الخلفي)	
الغطاء ويتضمن الحشية	
أداة الكبس	
Smoothie2Go مجموعة خلط تكون من:	
Smoothie2Go 600 مل زجاجات	عند استخدام برنامج مؤقتاً، اضغط على (5) (START/STOP). بينما المؤقت (7) والقرص (5) في المقبض للإشارة إلى وضع الإيقاف المؤقت. لاستكمال البرنامج اضغط على START/STOP مرة أخرى.
Smoothie2Go وتحتضم أنواعية المشروبات	
شفرات Smoothie2Go	
Smoothie2Go محول	
قبل أول استخدام	وظيفة „الحساء الساخن“
قم بتنظيف جميع الأجزاء قبل استخدام الخلط لأول مرة - ارجع إلى قسم „العالية والتنظيف.“	عند استخدام برنامج soup + قوام smooth تصل الشفرات في الإبريق إلى سرعات عالية بما يكفي لجعل المكونات الباردة تسخن بالبخار في حوالي 6 دقائق.
عند التشغيل (6) وتحجيم أي حاوية (2)، يظهر MANUAL ويومض زر (5) (START/STOP)، مشيرًا إلى أن الجهاز جاهز للاستخدام.	تنبيه: لا تُنفِّذ مكونات ساخنة (أكثر من 25 درجة مئوية) عند استخدام هذه الوظيفة. عند تحضير الحساء بمكونات ساخنة مطبوخة مسبقاً، استخدم القوام .medium/coarse .
مجرد إزالة غطاء المعايرة (1)، يمكنك إضافة مكونات أو سوائل إضافية على السرعة المخفضة (أ).	
تنبيه:	
لا تحاول أبداً تشغيل الجهاز دون استخدام لوحة التوسبيط (4).	لتشغيل/إيقاف الخلط، اضغط على زر (5) (START/STOP). المؤقت (7) بعد تصاعدياً (C). للحصول على إرشادات معالجة مفصلة، راجع الجدول الأول „I“.
كن حذرًا عند خلط السوائل الساخنة في الإبريق باستخدام الوضع اليدوي. أبدأ الخلط على السرعة 1 لتجنب الحرائق المحتملة بسبب تسرب البخار وختال السوائل الساخنة. أقصى كمية مسموح بها من المكونات السائلة الساخنة في الإبريق هي 1500 مل.	يمكن استخدام وضع النبضات لتقييم قطع أكبر من الطعام أو للتحكم في قوام الطعام أثناء التقاطع. وضع النبضات على أي سرعة مرغوبة. تعتمد المدة على طول المدة التي تضطجع فيها على زر (D) (START/STOP).
قد تكون قاعد التعشيق ساخنة بعد التشغيل - فلا تلمسها.	
(F) استخدام أداة الكبس	(E) استخدام غطاء المعايرة ذي الوظيفة المزدوجة
أثناء التشغيل، استخدم غطاء المعايرة (1) لإضافة الزيت ببطء من خلال فتحة التقاطع لاستحلاب العصارات والمقرات (E.a) أو إضافة كميات صغيرة من السوائل بسهولة (E.b).	

ملحوظة: يجب استخدامه عندما يكون الجزء الرئيسي من الخطاء في مكانه فقط.

(G) الخلط مع زجاجة Smoothie2Go

ملحوظة: عند استخدام زجاجة Smoothie2Go يكون برنامج smoothie وSmoothie crush متاحين للستخدام. يجب أولاً يتم استخدام زجاجة Smoothie 2Go لخلط الأطعمة الساخنة أو السوائل الغازية. لتجنب التلف، لا ملأواويات ما بعد علامة „max.“.

عند تحضير مخفوقات البروتين أو المشروبات التي تحتوي على الكحول، لا ملأها أكثر من الحد الأقصى 400 مل.

للحصول على إرشادات معالجة مفصلة، راجع الجدول الثاني «II.».

إيقاف التشغيل التلقائي

الجهاز المُجمع مع الإبريق (2) يتوقف عن الخلط تلقائياً بعد 6 دقائق من وقت المعالجة في الوضع اليدوي ويتم تجميعه باستخدام زجاجة Smoothie2Go (13) بعد دقيقتين. لإعادة تشغيل العملية، اضغط على (START/STOP) (5).

وضع الاستعداد

إذا لم يتم تحديد أي سرعة أو وضع، يدخل الجهاز في وضع الاستعداد تلقائياً بعد دقيقتين ويتم إيقاف تشغيل جميع مصايب المؤشر، ويتم تعطيم المؤقت (7) فقط ويعرض «---». لإعادة تشغيل الخلط اضغط على أي زر أو حرك القرص (5).

حماية المحرك الحراري

الخلط مزود بواقي حراري والذي يحمي المحرك من الحرارة الزائدة. إذا توقف تشغيل المحرك أثناء العملية، فافصل الخلط واتركه يبرد مدة 30 دقيقة قبل الاستمرار في الخلط.

للحصول على أفضل النتائج

- إذا توقفت عملية الخلط أثناء الخلط، فقد لا يكون هناك ما يكفي من السائل للخلط بكفاءة. أضف المزيد من السوائل أو أدخل أداة الكبس وادفعها ببطء.
- لإعداد كميات صغيرة من الطعام، استخدم مستوى سرعة منخفض.
- عند تقطيع المكسرات والجبن واللحوم، نوصي بتشغيل البرنامج/القوام المختار مررتين لتحقيق النتائج المرغوبة.

عند تقطيع الخضار ننصح بإضافة كمية قليلة من الماء لتحسين دوران الخلاط. بعد الانتهاء، قم بتنقية المكونات المقطعة.

اماً الإبريق بالترتيب التالي: السوائل، السليع الجافة، الخضار الورقي، المكونات اللينة، المكونات الصلبة أو المجمدة، مكعبات الثلج. أماً Smootie2Go المكونات بالترتيب السابق لكن بشكل معكوس مع زجاجة Smoothie2Go.

إذا كان الخلط في الوضع اليدوي، فابداً دأباً بالسرعة 1 وقم بزيادة السرعة ببطء إلى السرعة المرغوبة.

عند تقطيع المكونات الصلبة (مثل البارميزان، أو الشوكولاتة، أو اللحوم)، قم بتنقيةها إلى قطع صغيرة (3 سم).

(H) العناية والتنظيف

نوصي بتنظيف الإبريق باستخدام برنامج CLEAN وذلك من أجل إطالة عمره. سيتوقف البرنامج تلقائياً مجرد اكمال الدورة.

اماً الإبريق (2) حتى المنتصف بالماء، ثم أضف بضع قطرات من صابون غسيل الأطباق واتبع الخطوات الموضحة (ج). ينطبق نفس الإجراء مع زجاجة (13) Smoothie2Go.

للحصول على أفضل النتائج، قم بتشغيل برنامج CLEAN مباشرةً بعد الاستخدام. تأكد من شطف الإبريق جيداً وتوجيفه في الهواء بعد الانتهاء من البرنامج.

التنظيف الجيد

نوصي بإجراء تنظيف جيد للإبريق على أساس شهرى باستخدام محلول الخل لإزالة بقايا الطعام أو البقع.

قم بإعداد محلول الخل في الإبريق: خفف 500 مل من الخل (5% حمض) في 500 مل من الماء (نسبة 1:1) وابدأ برنامج CLEAN. أبيق الخليط في الإبريق لمدة 5 دقائق كحد أقصى. اشطف الإبريق جيداً بعد كل تنظيف جيد واتركه يجف في الهواء.

الضمان وخدمة الصيانة

للحصول على معلومات مفصلة، انظر النشرة المنفصلة للضمان وخدمة الصيانة أو قم بزيارة www.braunhousehold.com.



يرجى عدم التخلص من المنتج ضمن المخلفات المنزلية عند نهاية فترة الصلاحية للاستخدام. يمكن أن يتم التخلص من أو في نقاط التجميع Braunkit الجهاز في مركز خدمات ملائمة التي توفرها دولتك.

•

•

•

•

•

المشكلة	السبب المحتمل	الحل
الخلاط لا يعمل	لا يوجد إمداد بالكهرباء	تحقق من المصهر/قطاع الدائرة في منزلك، إذا لم يجد أي شيء مما سبق نفعاً، فاتصل بخدمة عملاء Braun
السائل يتبخر من الإبريق	• يتم توصيل أيّاً من إبريق أو ملحق Smoot- hie2Go بشكل صحيح المؤقت يعرض ثلاث شرطات (- - -)	تحقق من الموضع الصحيح للملحق
قاعدة المحرك تتحرك على سطح العمل	• يتم تركيب الحشية بشكل صحيح، أنها مفككة أو حتى ممزقة	تأكد من أن الحشية مركبة بشكل صحيح
يظهر „OL“ على شاشة المؤقت	غطاء الإبريق أو غطاء المعالجة غير مغلقين بشكل صحيح	أغلق غطاء الإبريق وغطاء المعالجة
E01	الإبريق معباً بشكل مفرط	تبع توصية الكمية القصوى في جدول المعالجة
E02/E03	الأرجل المطاطية ليست نظيفة	تنظيف القدمين المطاطيتين لضمان ثبات جيد
E01 , E02 , E03 , E04 , E05	حماية من زيادة الحمولة لـ Smoothie2Go	قلل كمية الماء (يرجى الرجوع إلى الفصل ز).
E01	حماية من زيادة الحمولة	قم بإيقاف تشغيل الخلاط، وقم بإزالة الحاجة من قاعدة المحرك وتحقق مما إذا كانت الشفرة عالقة. اتبع السرعة الموصى بها، والحد الأقصى لسرعة التعبئة، أو الوضع في جدول المعالجة
E04, E05	يتم تشغيل الحماية الحرارية لحماية وحدة المحرك من السخونة الزائدة	أوقف تشغيل الخلاط، وافصله عن الكهرباء وانتظر 30 دقيقة على الأقل قبل استئناف العملية. إذا لم يختفي رمز الخطأ، فاتصل بخدمة عملاء Braun
E01	يظهر رمز الخطأ على شاشة المؤقت (E01 ، E02 ، E03 ، E04 ، E05)	قم بإيقاف تشغيل الخلاط ثم قم بتشغيله مرة أخرى. إذا لم يختفي رمز الخطأ، فاتصل بخدمة عملاء Braun

